


1

REV:01

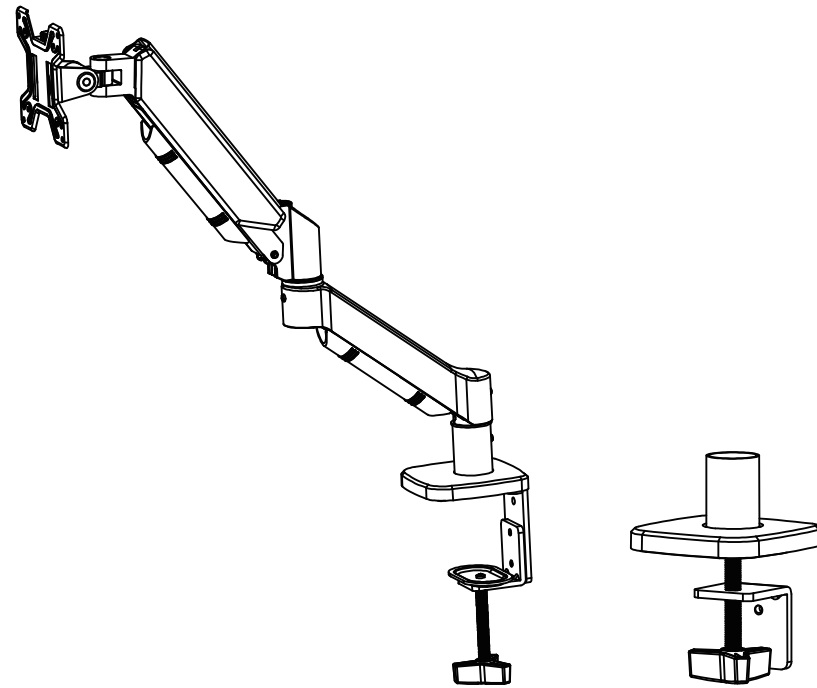




















75x75  
100x100





CAUTION: DO NOT EXCEED  
RATED LISTED WEIGHT. SERIOUS  
INJURY OR PROPERTY DAMAGE  
MAY OCCUR!  
WE DO NOT RESPONSIBLE FOR  
DAMAGES CASUED BY IMPROPER  
INSTALLATION!

**M252**


## PART LIST

	<b>①</b> X1		<b>M6X8 A</b> X2		<b>F</b> X1 4mm
	<b>②</b> X1		<b>M6X10 B</b> X2		<b>G</b> X1
	<b>③</b> X1		<b>M4x30 C</b> X4		<b>H</b> X4
	<b>④</b> X1		<b>M4X12 D</b> X4		<b>M4X8 I</b> X4
	<b>⑤</b> X1		<b>E</b> X4		<b>M4x10x1 J</b> X4
	<b>⑥</b> X1		<b>F</b> X1 3mm		<b>M4X8 J</b> X2
			<b>F</b> X1 6mm		





2

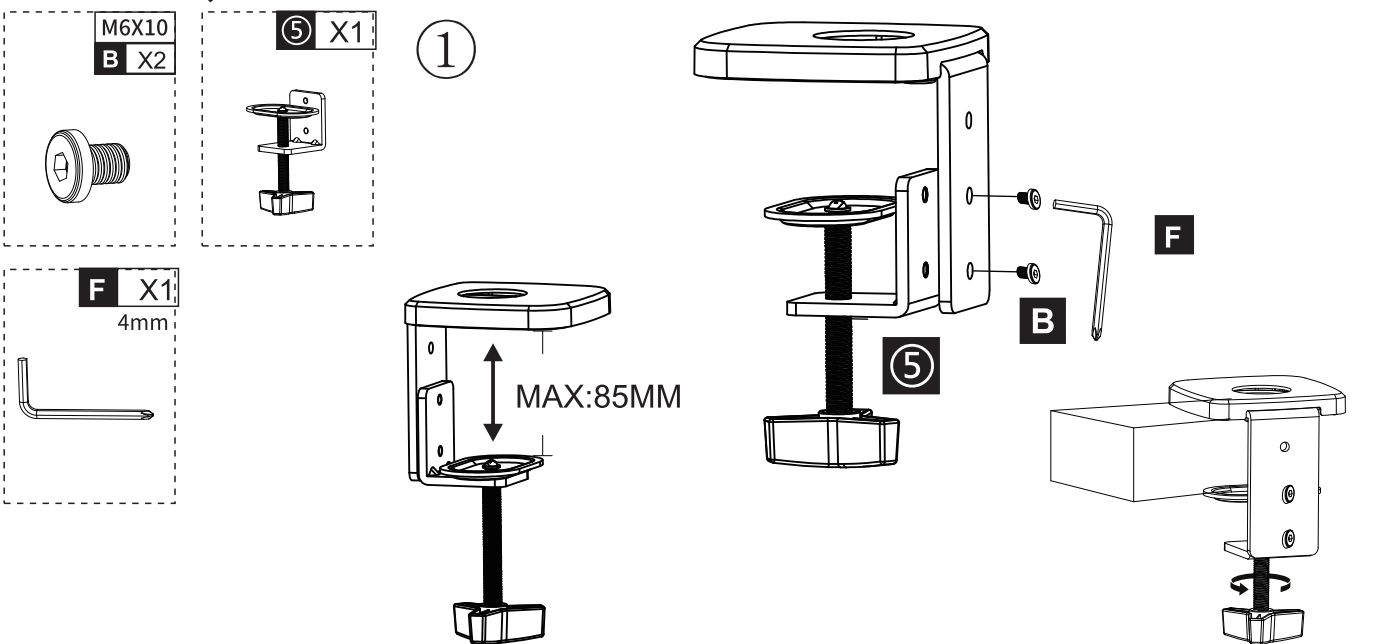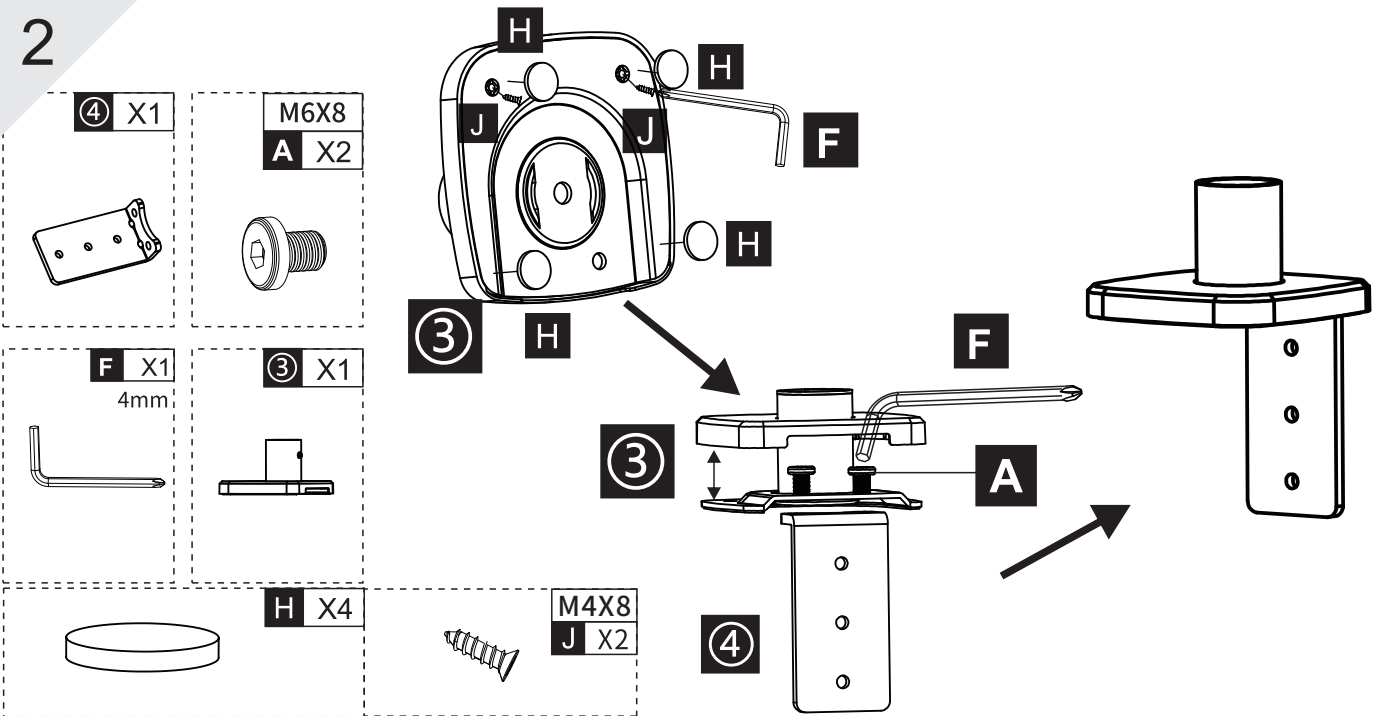



②

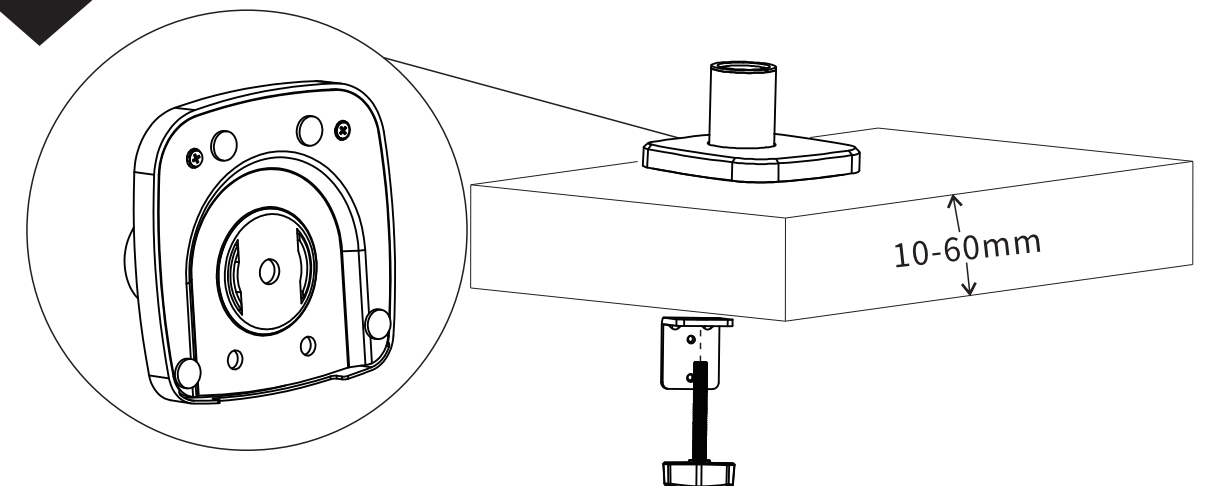






3

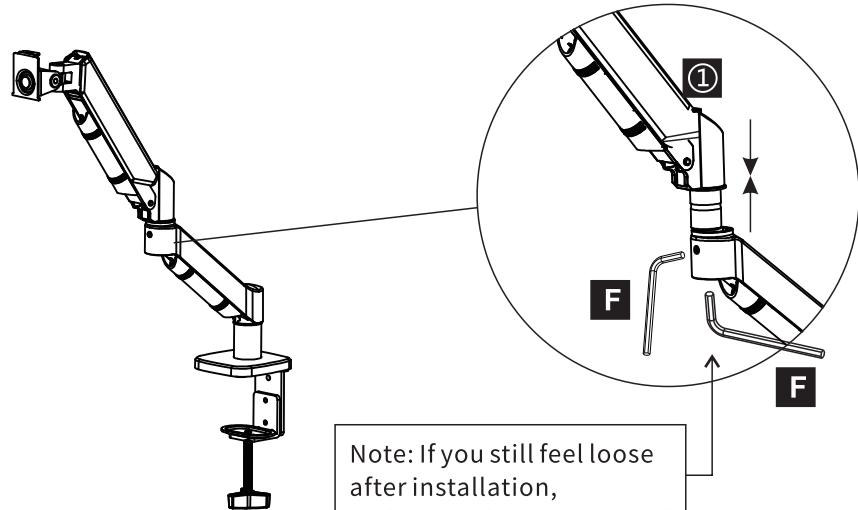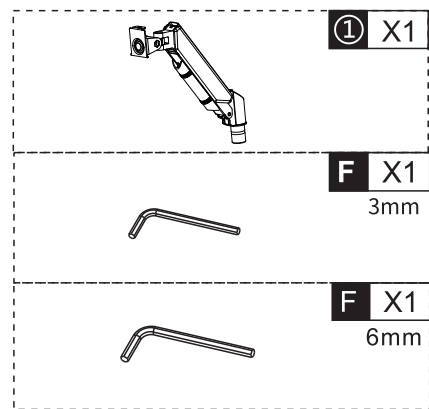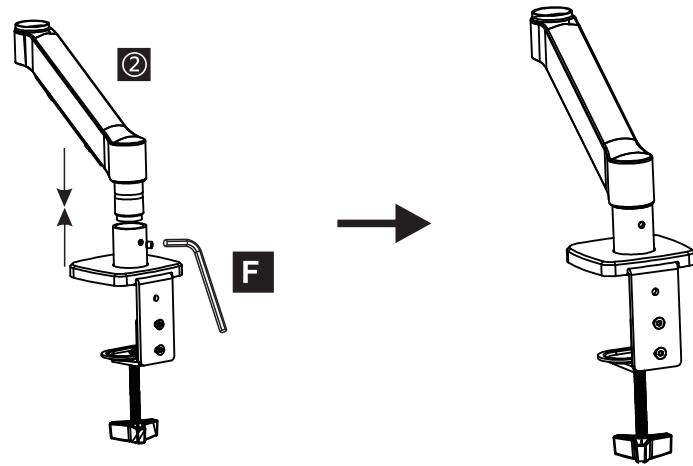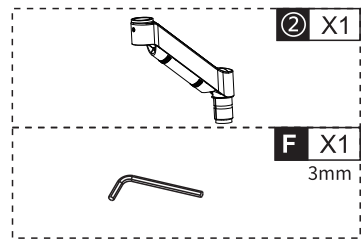

Note: If you still feel loose after installation, Tighten with a 6mm wrench

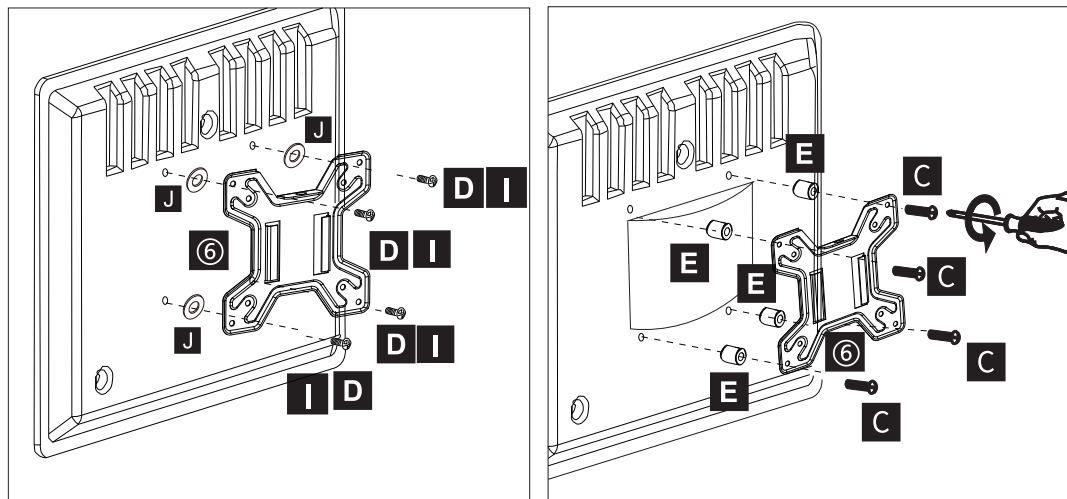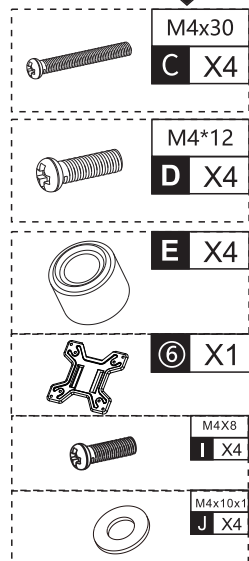

4

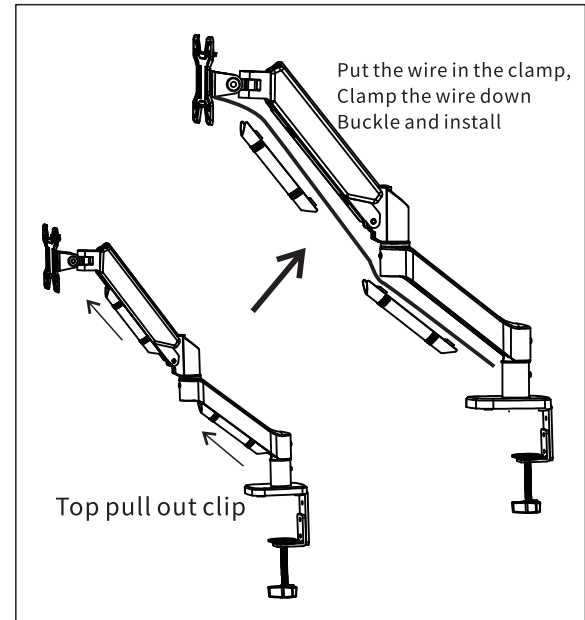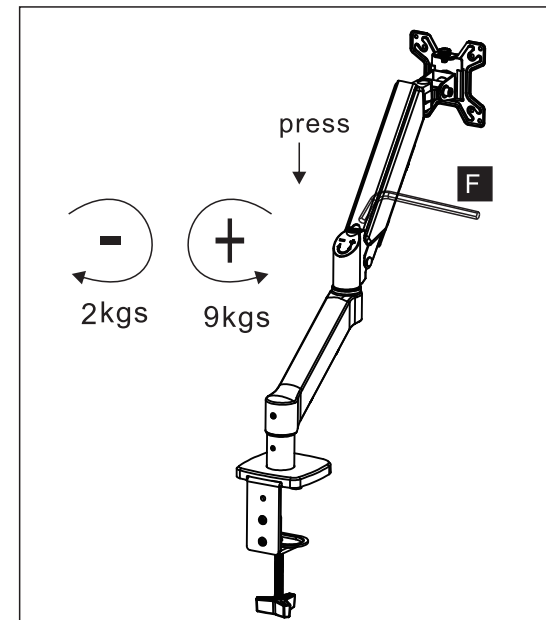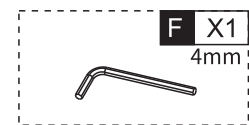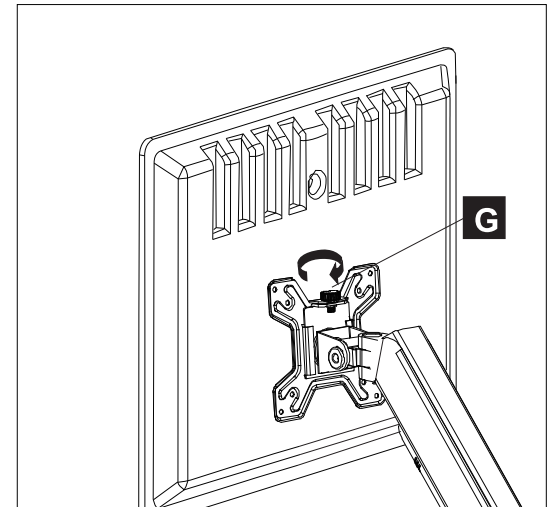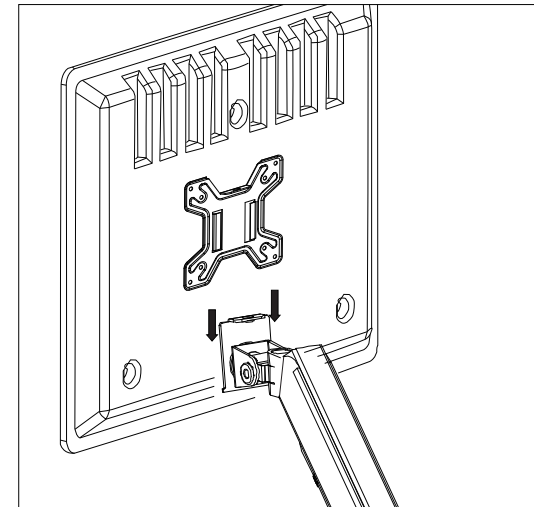

Put the wire in the clamp, Clamp the wire down Buckle and install

Top pull out clip

